

OK2D86BH Closed Loop Stepper Driver Instructions



Features:

It can drive NEMA 34 closed loop stepper motor without complex parameter adjustment. The motor will be automatically matched after power-on.

Voltage input range: 18~70 VAC, 24-100VDC

Maximum peak current: 6A

Microstep (Steps/rev.) : 400~51200

Signal input: differential/single-ended, pulse/directional or dual pulse,

Compatible with signal level 5~24V.

Optically isolated signal input, strong anti-interference ability;

Max. Pulse Input (KHZ) : 200KHz

Closed-loop vector control ensures that the motor outputs high speed and high torque while ensuring that the motor does not lose steps.

Variable current control, automatically outputs matching current according to load and speed, greatly reducing motor heating.

Ultra-low vibration and noise;

With overvoltage, overcurrent, position following error and other protection functions;

二 · Electrical Specification

1. Specification

Parameters	BH86			
	Min	Typical	Max	Unit
Output Peak Current	-	-	8.2	A
Input Voltage	24	48	100	VDC
Logic Signal Current	7	10	20	MA
Pulse input frequency	-	300	-	KHZ
Isolation resistance	500			MΩ

2. Operating Environment and other Specifications

Cooling	Natural Cooling or Forced cooling	
Operating Environment	Environment	Avoid dust, oil fog and corrosive gases
	Storage Temperature	-20%~+80°C
	Ambient Temperature	0°C - 70°C
	Humidity	<80%RH, No-condensing and No-frost
Vibration	-	5.9m/s ² ,Max
Weight	-	0.58kg

3. Power and Motor Connector

PIN	Name	Description	Instruction
1	A +	Motor Phase A+	If the initial direction of the motor is opposite to what is required, you can set SW5.
2	A -	Motor Phase A-	
3	B +	Motor Phase B+	
4	B -	Motor Phase B-	
5	AC	Input AC power	18V~ 70VAC
6	AC	AC voltage	Direct current does not need to be divided into positive and negative poles


4. Encoder signal input port

Pin	Name	Description	Instruction
1	EB +	Encoder channel B+ input	
2	EB -	Encoder channel B- input	
3	EA +	Encoder channel A+ input	
4	EA -	Encoder channel A- input	
5	VCC	Encoder power supply	+5V
6	EGND	Signal ground	0V

5. Control Signal Port

Name	Instruction
PUL +	Pulse input signal: Pulse Signal: In single pulse (pulse/direction) mode, this input represents pulse signal, each rising or falling edge active (software configurable, see Closed-loop
PUL -	

	Stepper software manual for more detail); In double pulse mode (software configurable), this input represents clockwise (CW) pulse, active both at high level and low level. The width of PUL signal is at least 1.2μs. 5-24V when PUL-HIGH, 0-0.5V when PUL-LOW. In Double pulse mode : CW
DIR +	DIR signal: In single-pulse mode, this signal has low/high voltage levels, representing two directions of motor rotation; In CW/CCW mode, this signal is-counter-clock (CCW) pulse. For reliable motion response, DIR signal should be ahead of PUL signal by 5us at least. 5-24V when DIR-HIGH, 0-0.5V when DIR-LOW. Please note that rotation direction is also related to motor-driver wiring match. Exchanging the connection of two wires for a coil to the driver will reverse motion direction.
DIR -	
ENA +	Enablesignal: This signal is used for enabling/disabling the drive. High level (NPN control signal, PNP and differential control signals are on the contrary, namely low level for enabling.) For enabling the drive and low level for disabling the drive. Usually left UNCONNECTED
ENA -	
Pend +	The in-position signal output is in the form of open collector.
Pend -	
ALM +	The fault signal output is in the form of open collector.
ALM -	

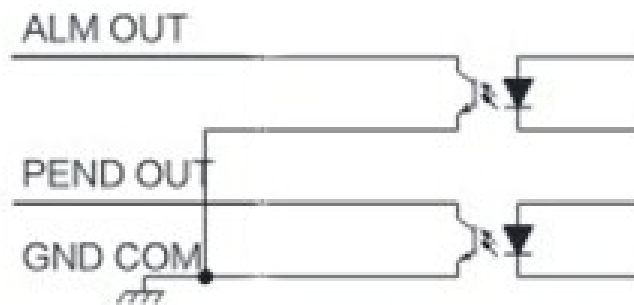

Alarm in place output wiring diagram

6. DIP Switch Settings

The driver uses a six-digit DIP switch to set the subdivision and motor rotation direction. The detailed description is as follows:

6. Microstep Setting:

Steps/rev	SW1	SW2	SW3	SW4
Default	on	on	on	on
800	off	on	on	on
1600	on	off	on	on
3200	off	off	on	on
6400	on	on	off	on
12800	off	on	off	on
25600	on	off	off	on
51200	off	off	off	on
1000	on	on	on	off
2000	off	on	on	off
4000	on	off	on	off

5000	off	off	on	off
8000	on	on	off	off
10000	off	on	off	off
20000	on	off	off	off
40000	off	off	off	off

SW5:Motor DIR Initialize running direction, ,off=CC clockwise (Positive

direction) ,on=CW Counterclockwise (Reverse direction)

SW6:off; Standard mode on; Start acceleration assist (Not applicable to arc interpolation signals)

SW7	SW8	Motor Frame Size(mm)
on	on	Frame Size (60 x 60)
off	on	Frame Size (86-80), (86-118)
on	off	Frame Size (86-151)
off	off	Frame Size (86 x 86) open loop, current 6.0A

7. Mechanical Specifications: (unit: mm [1inch=25.4mm])

